Quick Start

1. Remove battery. Fully charge before use.

2. Open the Ring app and select Set Up a Device. Then follow the in-app instructions.

3. Scan this code.

This identifies your Ring device to make setup fast and easy.

OR+FR



Included installation hardware.

Bag Hardware





(5) Short Mounting Screws To mount Ring Doorbell directly to a wall

(5) Wall Anchors

To install on concrete, stucco, or brick

(2) Security Screws

To secure Ring Doorbell after installation

Corner Mount Hardware





To mount Ring Doorbell to the corner mount



(3) Medium Bracket Screws



(3) Wall Anchors To install on concrete, stucco, or brick

To secure the corner mount to a wall









Remove the faceplate.

Firmly grasp the bottom of the faceplate and pull to remove.

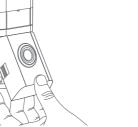

Take out the battery.

Press the metal tab in and slide the battery out.

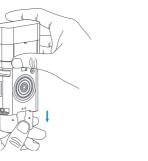

Charge the battery.

Fully charge the battery by plugging it into a power source using the provided orange cable.

The red light will turn off once it's fully charged.



Insert the battery.

After charging, insert the battery in the bottom of your Ring Doorbell until it clicks into place.



The Ring app walks you through setting up and managing your Ring Doorbell.

Search for "Ring" in one of the app stores below, or visit ring.com/app

Download the Ring app.



Do you have an in-home chime?

The chime can ring when the button on your Ring Doorbell is pressed. To set this up, just follow the instructions in the app.

Don't have an in-home chime?

If you see the "No In-Home Chime" button during setup, be sure to press it.

NO IN-HOME CHIME

Consider purchasing a Ring Chime or Ring Chime Pro, which allows you to hear alerts from anywhere in your home. Learn more at ring.com

Set up your Ring Doorbell near your wifi router.

_

In the Ring app, select **Set Up a Device** and follow the in-app instructions.

Try it out.

After setup, push the button on the front of your Ring Doorbell to see video from the camera in the Ring app.

you have problems with video quality after

nstallation, you may need to move your router

closer to your door, or add a Ring Chime Pro.

Learn more at: ring.com/chime-pro

If you're connecting to existing doorbell wiring that's higher than four feet and want

Install your Ring Doorbell.

to angle your Ring Doorbell down for a better view, you can purchase a Wedge Kit online at ring.com/accessories.

For the best results, mount it around four feet

Optional: Remove your existing doorbell.

(1.20 meters) above the ground. If connecting to existing doorbell wires, shut off power at the breaker. If you're not sure which breaker controls your doorbell, turn off the master breaker for your home, or contact


an electrician.


Once power is turned off, remove the doorbell button from the wall and disconnect the wires.

Your Ring Doorbell is compatible with doorbell systems supplying 8-24 volts AC at 50 or 60Hz, 40VA max.

\$ \[\(\) \



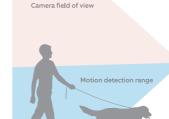

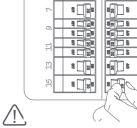

(1.20 meters)

You'll be working with electrical wires during the install process. If you are uncomfortable or inexperienced with doing so, consult with a licensed electrician. Do not wire your Ring Doorbell to a DC-powered intercom system or other DC power source.

You'll need to install wall anchors when installing on stucco, brick, or concrete (skip ahead to page 12 if installing on wood). We sent you two sets of wall anchors. Let's figure out which ones you'll need, and how to install them.

Optional: Install the wall anchors.



If installing directly to your wall, grab 4 of the wall anchors from Bag A. Using your Ring Doorbell as a template, mark 4 drill holes on the wall. Use a 1/4" masonry drill bit (not included) to drill the holes, then insert the 4 wall anchors.







Optional: Install the wall anchors. (continued) Optional: Secure the wires to the terminals.

If you're using the Corner Mount, grab 2

Corner Mount as a template, mark 2 drill

the 2 wall anchors.

of the wall anchors from Bag C. Using your

holes on the wall. Use a 1/4" masonry drill bit

(not included) to drill the holes, then insert

To connect your existing doorbell wires, loop one doorbell wire around each of the screw terminals on the rear of your Ring Doorbell then tighten to secure. It doesn't matter

which wire connects to which screw.

If your doorbell wires are too short to reach your Ring Doorbell, you can attach the included wire extenders using the included wire nuts.




If you connected to existing doorbell wires, feed all the wires (and the wire nuts and extenders, if you used them) into your wall before securing your Ring Doorbell.

If mounting directly to the wall, use 4 of the provided Short Mounting Screws from Bag A to secure your Ring Doorbell directly to the wall.



If using the Corner Mount, use 2 of the Medium Bracket Screws from Bag C to secure the Corner Mount to the wall, then use 2 of the Short Bracket Screws from Bag C to secure your Ring Doorbell to the Corner Mount.

The Corner Mount can be painted to match vour home.

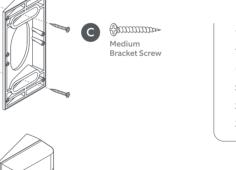



Optional: Restore power at the breaker. Install the faceplate.

If you connected to existing doorbell wires,

a moment for your Ring Doorbell to power

speaks to you.

on. You'll know it's ready once it lights up and

by slotting it in at the top and clicking it turn power back on at the breaker. It may take into place.

Place the faceplate on your Ring Doorbell


Secure the faceplate.

/ If you use the wrong screws to secure the faceplate, you could damage the battery during installation, create a fire hazard, and be seriously injured.

DO NOT USE any screw other than the included short security screws when securing the faceplate.

Lastly, use the included screwdriver to insert and tighten one of the security screws from Bag B.

Your Ring Doorbell is now ready to use.

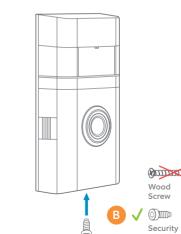

Free Ring Protect Plan for 30 days.

Your new device comes with a free, 30-day trial of Ring Protect. This comprehensive subscription service lets you review, save, and share your video and photo history anytime so you never miss a moment.*

To continue using Ring Protect after your free trial ends, visit ring.com/protect-plans to compare plans and pricing.



*Your free trial isn't applicable for locations with an existing Ring Protect subscription. See ring.com/protect-plans to learn more about your plan's retention period.



For additional help, visit ring.com/help

Or give us a call

US 1 800 656 1918

Canada 1 855 300 7289

Worldwide +1 310 929 7085

For a list of all our customer support numbers, visit ring.com/callus

For information on our warranty, theft protection, and Ring Protect Plans, see ring.com/legal

© 2022 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates. 22-002761-04











Mounting Screw

