 
 



Hardware included



Tools needed



 Phillips-head screwdriver

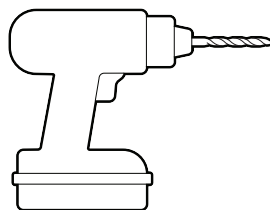


Drill with 3/16 in (5 mm) masonry bit (optional)

1.

Remove the rubber cap from your camera's power port.

 NOTE: Store the rubber cap in a safe place. Reinsert it into the power port when not using the power adapter.

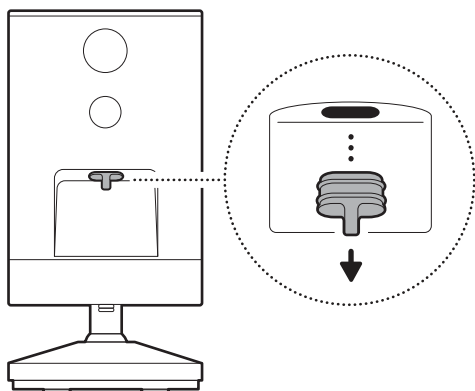


2.

Download the Ring Always Home app.




3.

 Scan the QR code on your device.

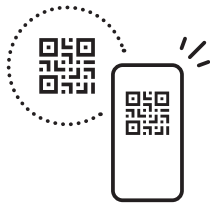

4.

 
Choose a location near an outlet.

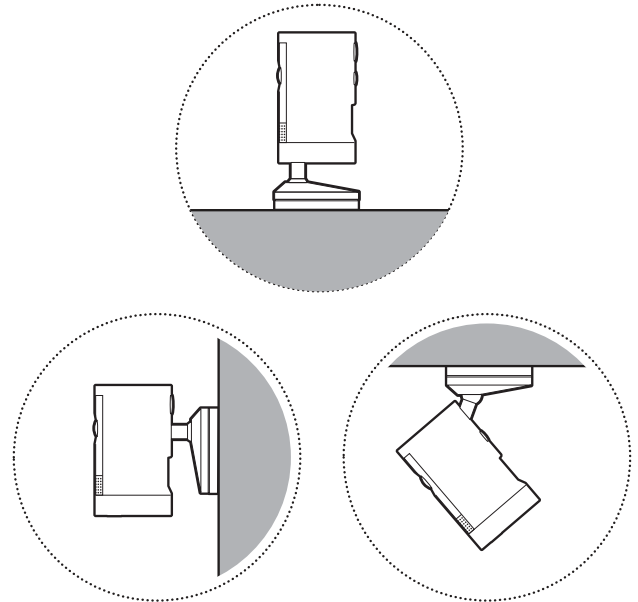

Flat installation

1.

 
Plug the power cable into your camera, ensuring it is fully inserted.

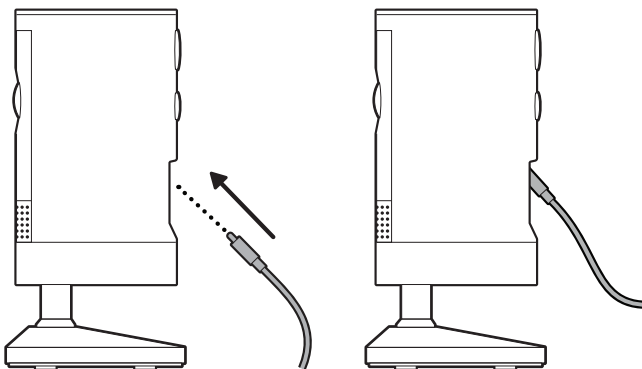

2.


Place your camera on a level surface with 5.5 in (14 cm) of space in every direction.

 NOTE: For a downward angle, face the longer side of the base toward the front and tilt your camera down accordingly.

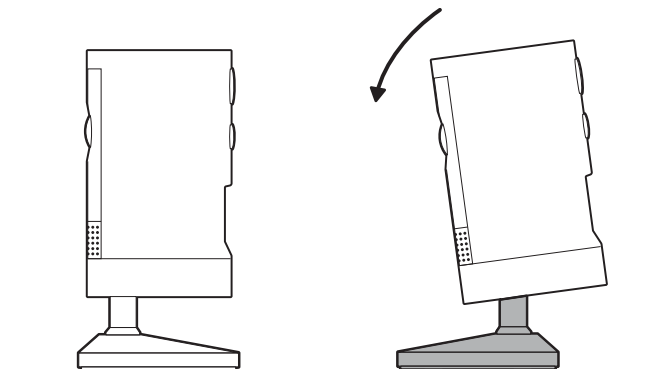

3.

 
Plug the power adapter into an outlet.

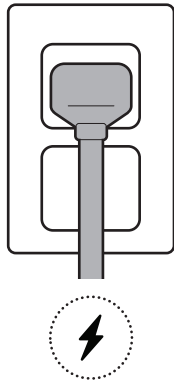

Wall installation


1.

 Slide the mounting plate in the direction opposite to the UP arrow to remove.

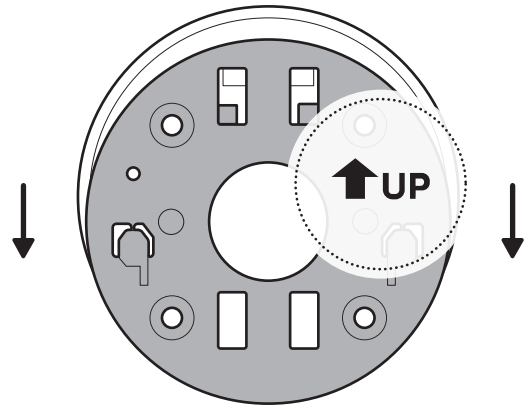


2.

 Use the mounting plate as a guide to mark screw holes on the wall with 5.5 in (14 cm) of space in every direction.

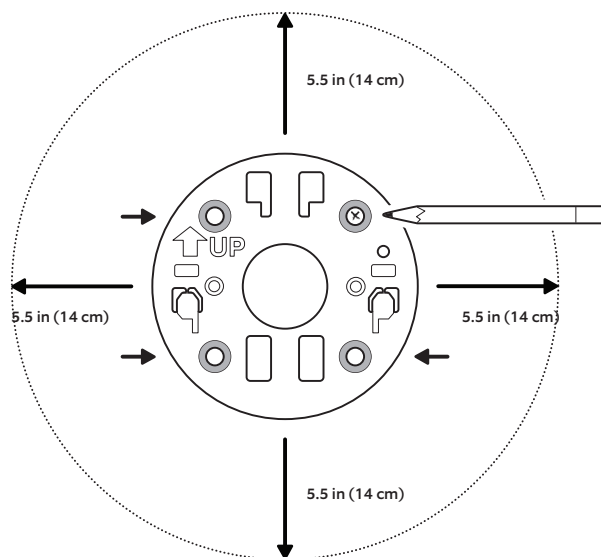


3.

 Install the mounting plate with the UP arrow pointing up.

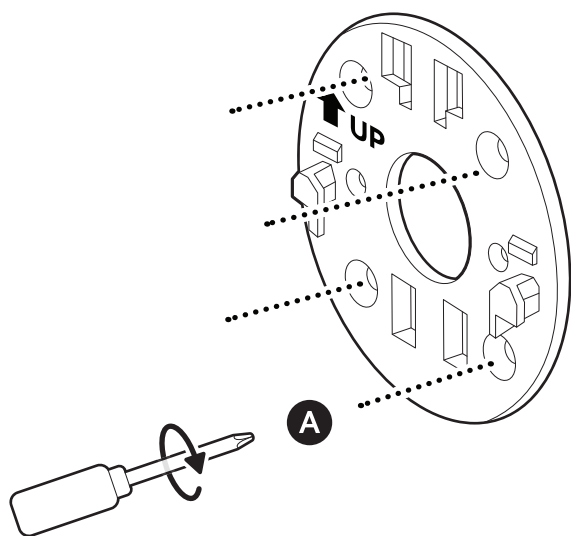


 On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

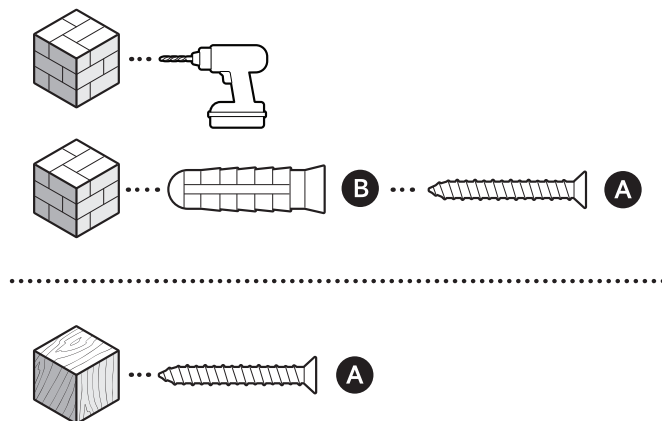


4.

 Unscrew to detach the camera mount.

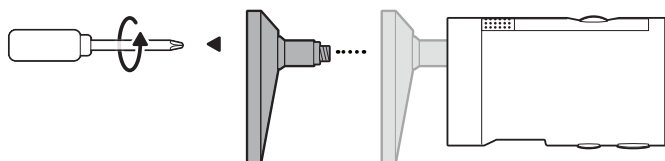


5.

 Remove the middle rubber cap on the back of your camera.

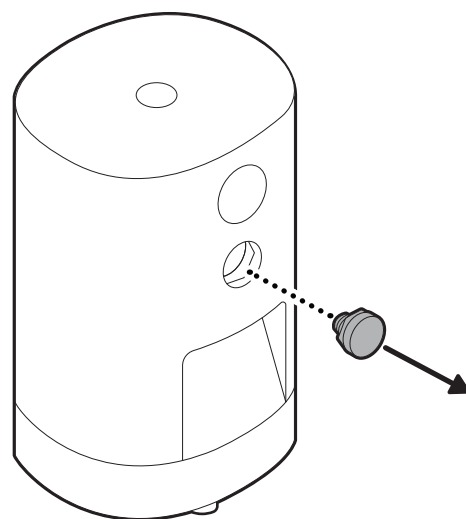


6.

 Attach the camera mount to the back of your camera with its screw.

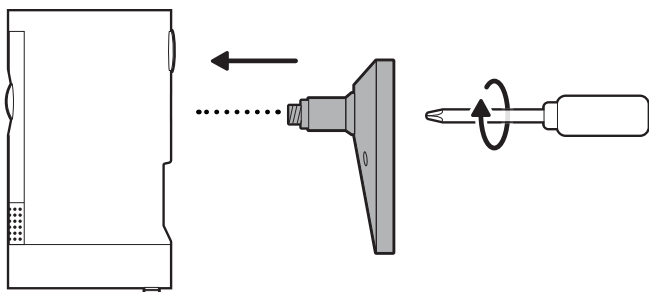


7.

 Plug the power cable into your camera, ensuring it is fully inserted.

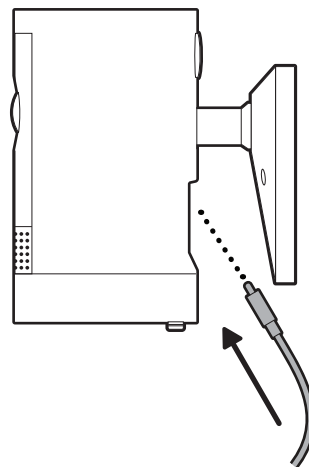


8.

 Secure your camera to the mounting plate by sliding until you feel a click.

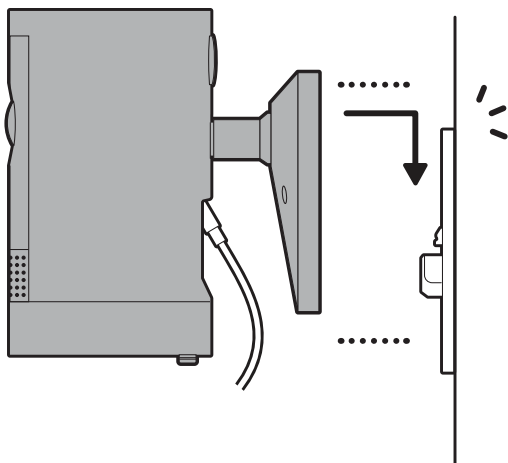


9.

 Rotate your camera and tighten the security screw.

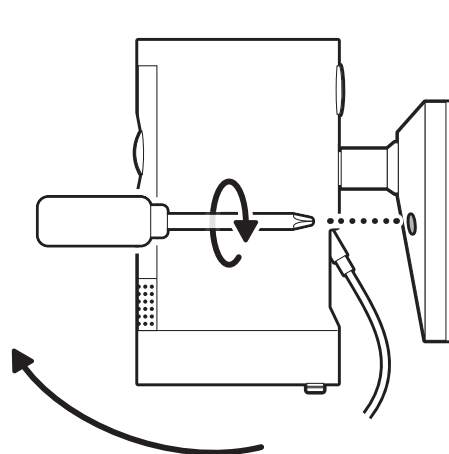

10.


 
Plug the power adapter into an outlet.

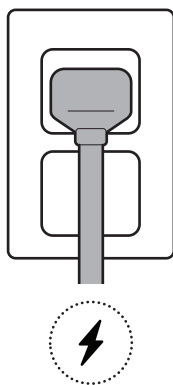

11.


Anchor the power cable to the wall or ceiling with the included cable clips.

  On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

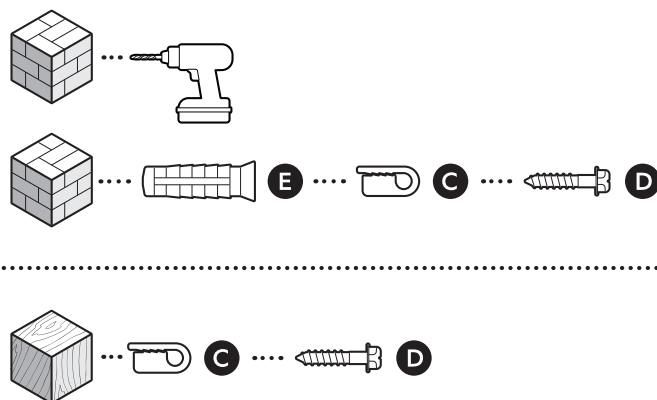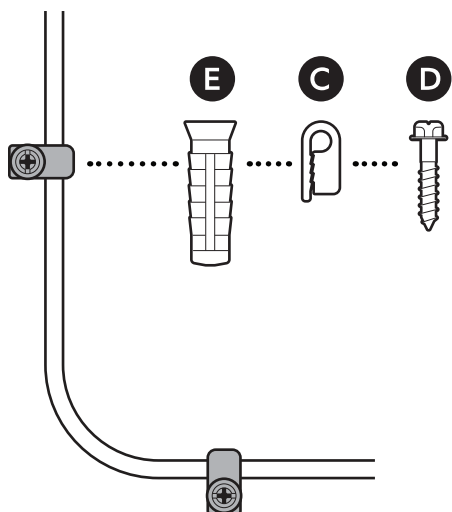


12.

 Secure the power adapter with the included anchors and screws.

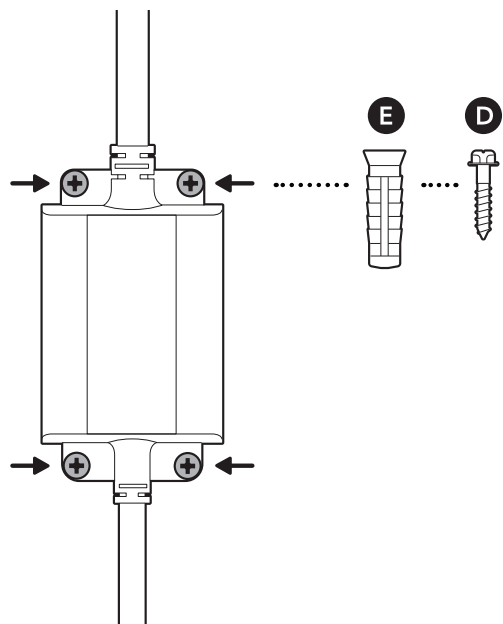

 
On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

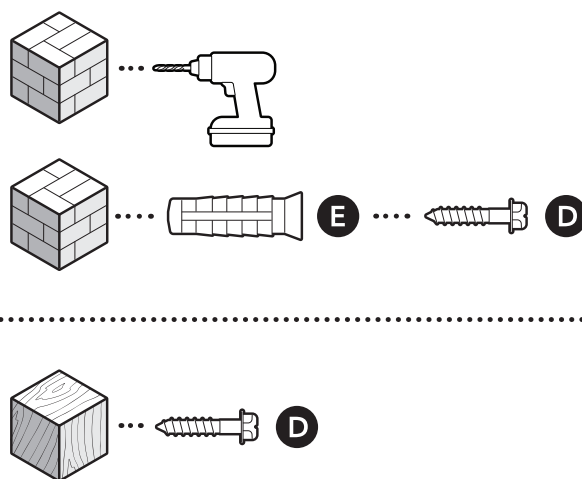

Ceiling installation

1.

 
Slide the mounting plate in the direction opposite to the UP arrow to remove.

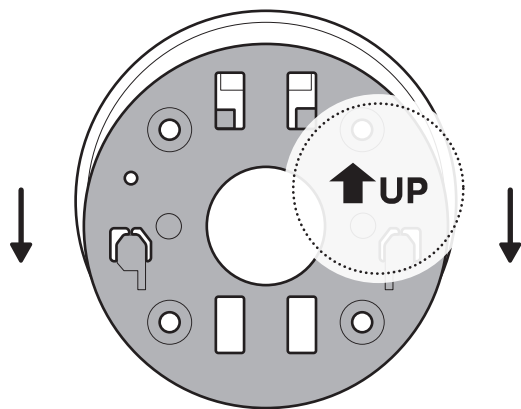

2.


Use the mounting plate as a guide to mark screw holes on the ceiling with 5.5 in (14 cm) of space in every direction.

 NOTE: For best results, avoid locations with nearby objects that can interfere with your camera's field of view.

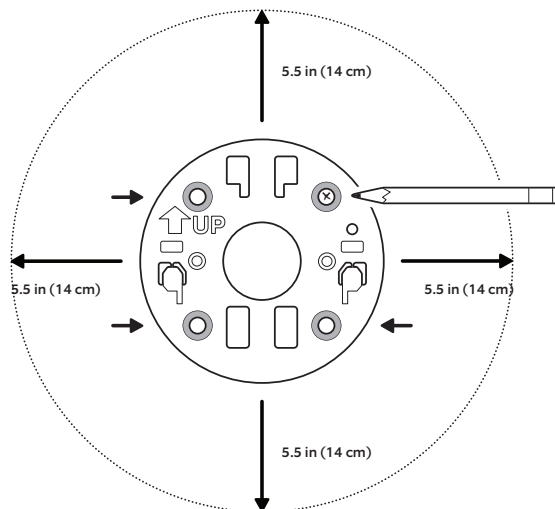


3.

 Install the mounting plate with the UP arrow pointing toward your desired viewing direction.

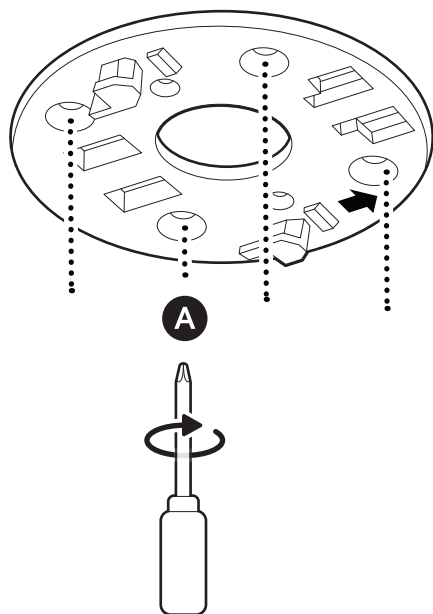


 On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

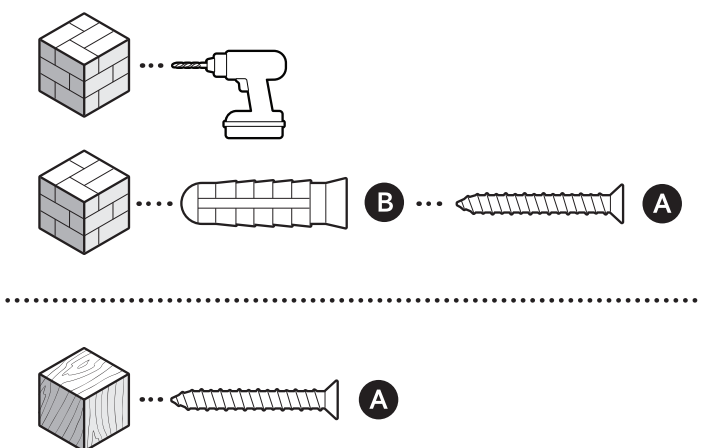


4.

 Unscrew to detach the camera mount.

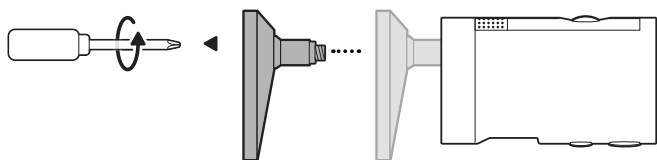


5.

 Remove the top rubber cap on the back of your camera.

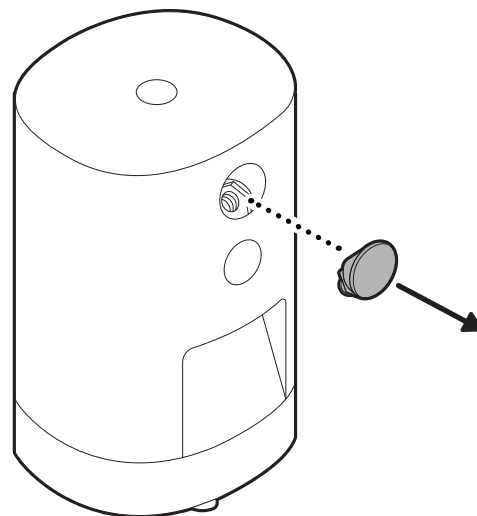

6.

 
Attach the camera mount to the back of your camera with its screw.

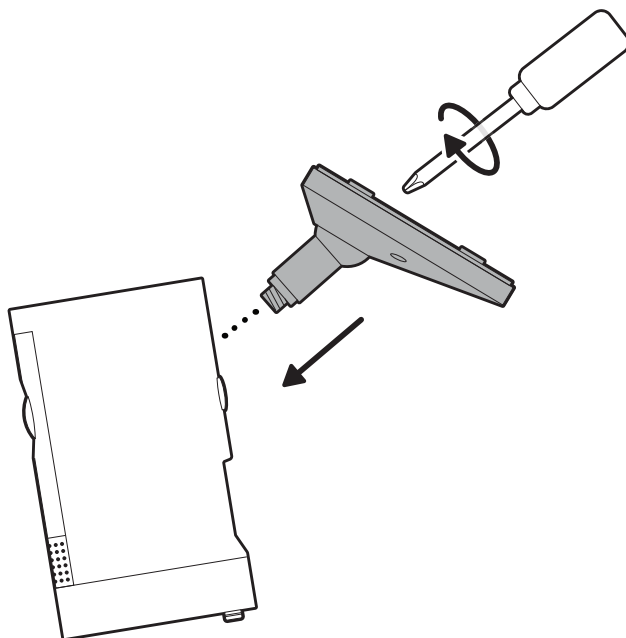

7.


Secure your camera to the mounting plate by sliding until you feel a click.

 NOTE: Your camera should be in an upright position.

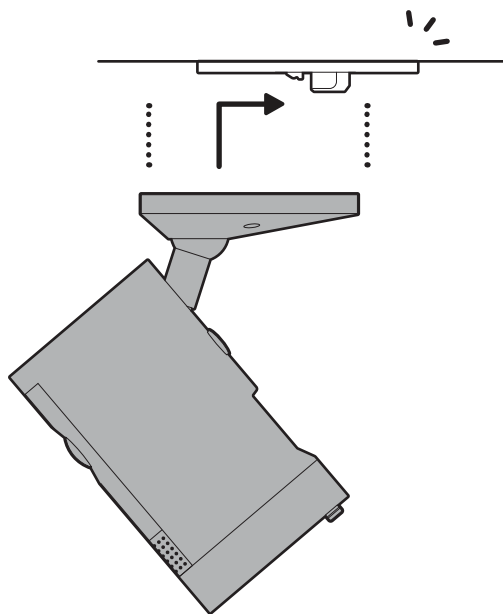


8.

 Rotate your camera and tighten the security screw.

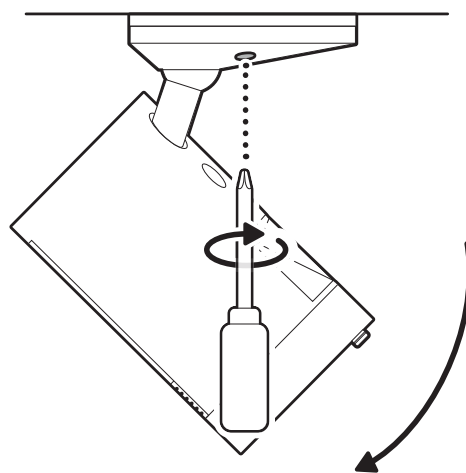


9.

 Plug the power cable into your camera, ensuring it is fully inserted.

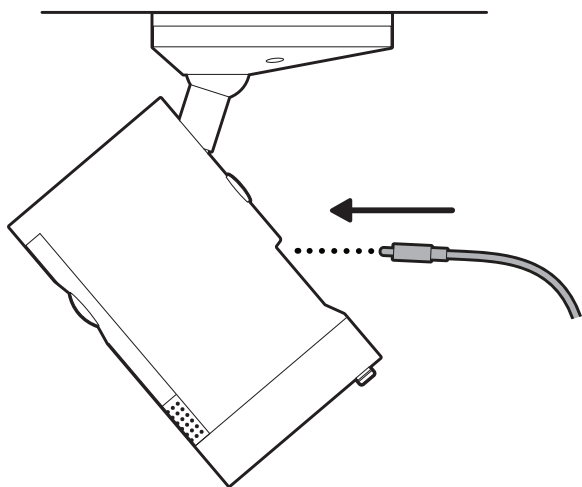


10.

 Plug the power adapter into an outlet.

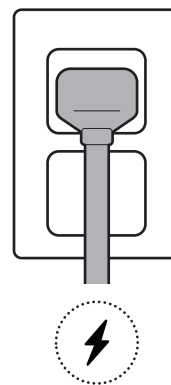


11.

 Anchor the power cable to the wall or ceiling with the included cable clips.

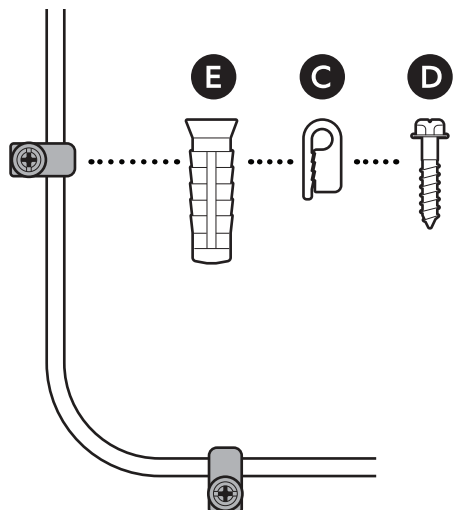


 
On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

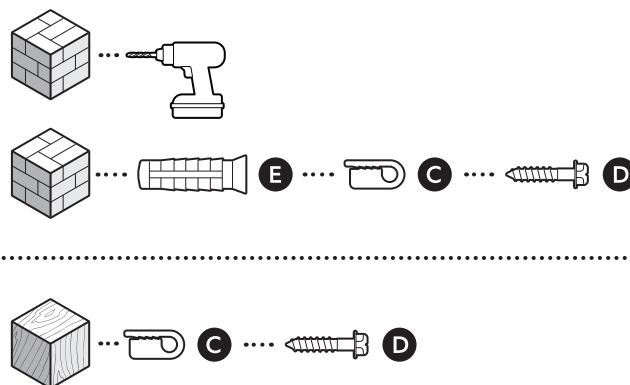

12.

Secure the power adapter with the included anchors and screws.

  On stucco, brick, or concrete, use a 3/16 in (5 mm) masonry bit to drill holes for the included wall anchors.

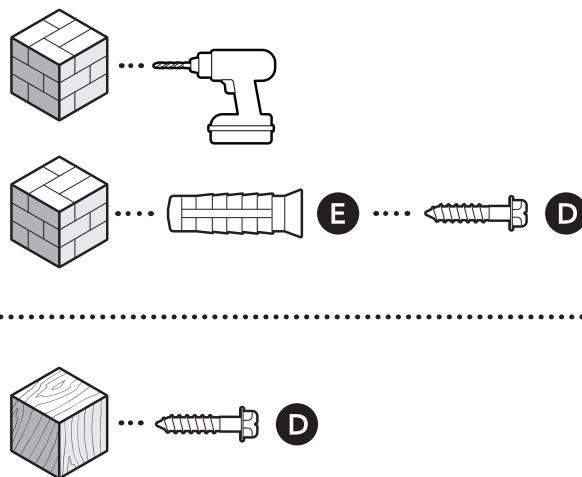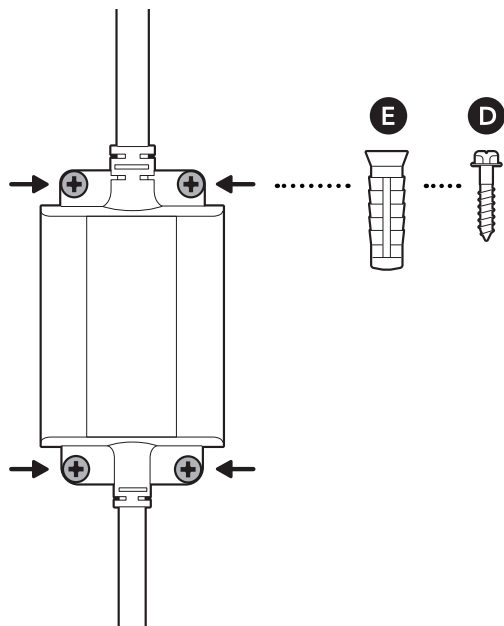

ring.com/contact



ring.com/help

Ring LLC 12515 Cerise Ave, Hawthorne, CA, 90250 USA

Ring LLC / Amazon EU S.à.r.l., 38 Avenue John F. Kennedy, L-1855 Luxembourg / Amazon UK, 1 Principal Place, Worship Street, London, EC2A 2FA, United Kingdom

アマゾンジャパン合同会社 〒153-0064 東京都目黒区下目黒1-8-1

Ring LLC ميني ٢٥ طريق سيريس، هاوثورن، كاليفورنيا، ٩٠٢٥٠، الولايات المتحدة الأمريكية

©2026 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates.

©2026 Ring LLC又はその関連会社。Ring及びこれらに関するすべての商標は、Ring LLC又はその関連会社の商標です。