

Keypad

Quick Start Guide

In-app Setup

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Keypad** in the **Security Devices** menu.
3. Follow the in-app instructions to complete setup.

Installation

1. Choose a convenient location so you can arm and disarm easily as you come and go.
2. You can rest the Keypad on a flat surface or install it on a wall with the bracket and screws provided.
3. The Keypad works whether plugged in or running on the rechargeable battery.
Charge the Keypad using the power adapter and USB cable provided.

If you're planning to use the Keypad unplugged, you should fully charge it first.



For additional help, visit:
ring.com/help

Keypad

Placement

