

Hardware Included



Tools Needed




Phillips-head screwdriver

Installation

1.

Shut off power at the breaker.

NOTE: If you are unsure which breaker to flip, turn off the master breaker or contact an electrician.

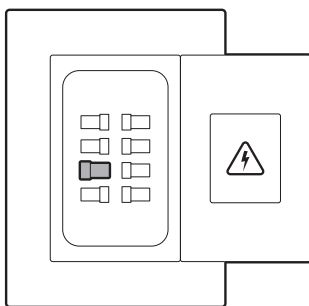

CAUTION!



You'll be working with electrical wires during the install process. If you encounter damaged or unsafe wiring, or if you are unsure, uncomfortable, or inexperienced, please consult with a licensed electrician.

For Australian and New Zealand Customers

Installation and wiring must be performed by a licensed electrician.


2.

Remove your doorbell chime's cover.

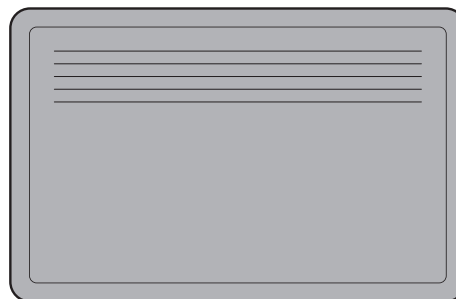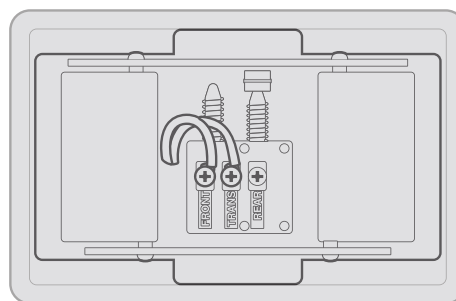


3.

Disconnect the wires attached to your chime.

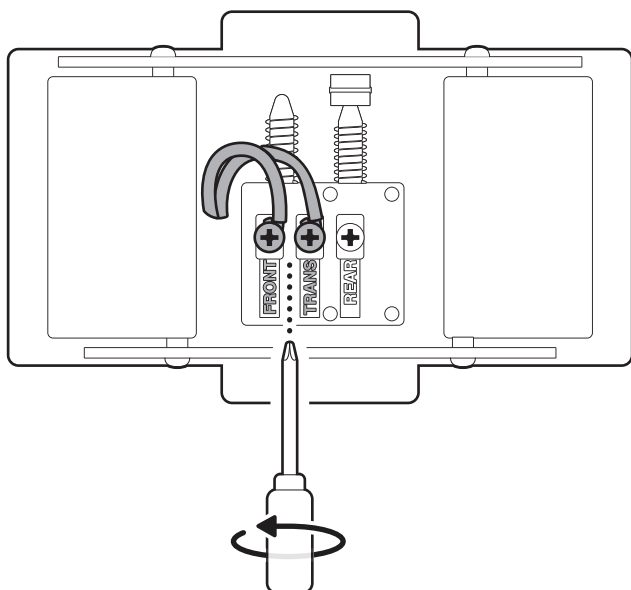


4.

Use the included wire nut to connect the wires together.

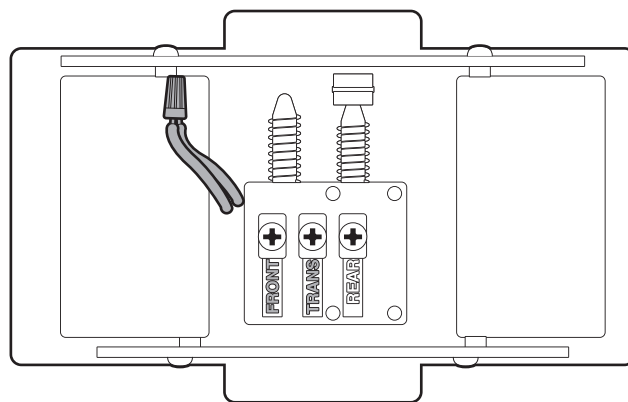


5.

Re-attach your chime's cover.

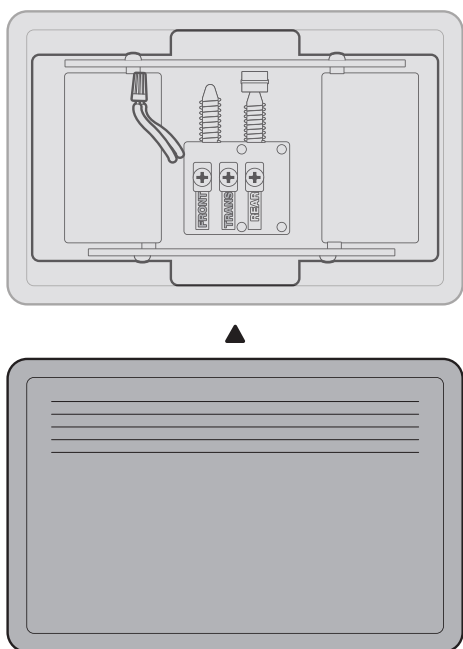


6.

Locate the existing doorbell transformer.

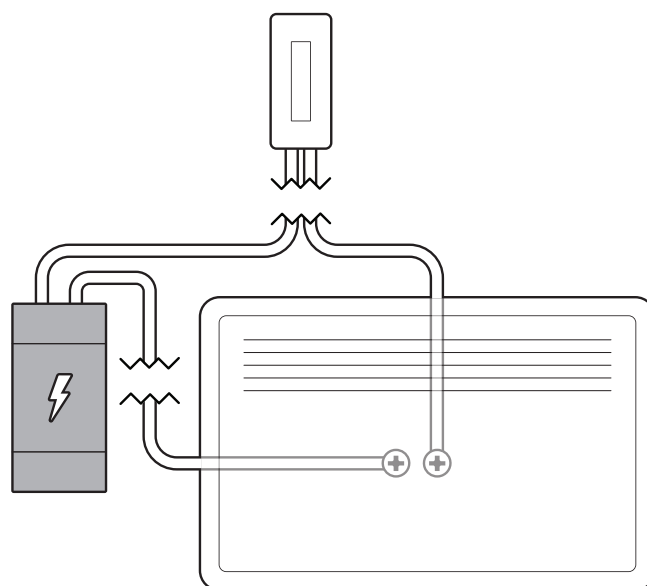


(Optional) Remove the transformer from its housing unit.

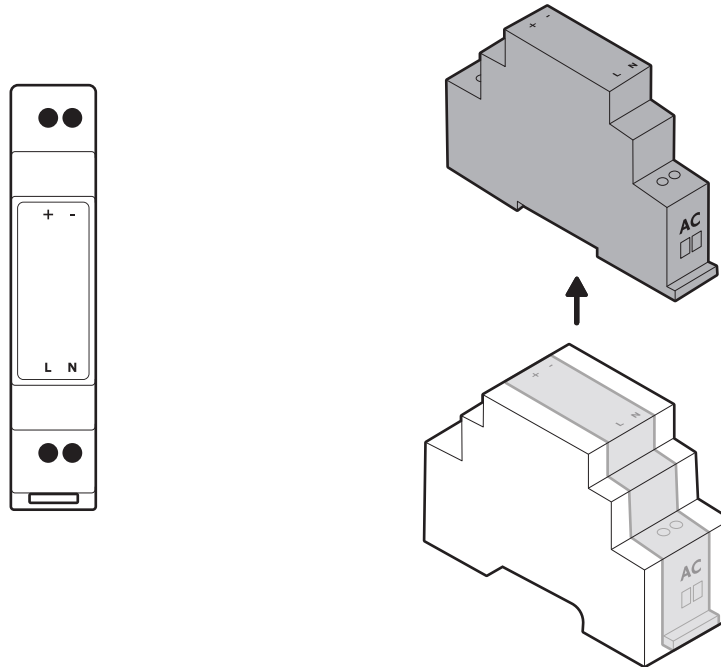


7.

Install the included transformer.

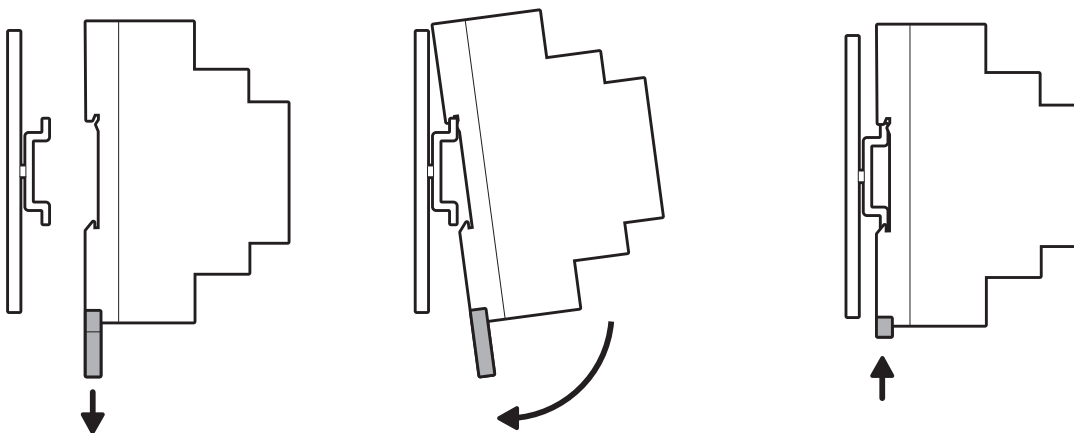


8.

Connect power to the bottom L & N terminals and the doorbell to positive & negative terminals (doorbell wires can go in either terminal).

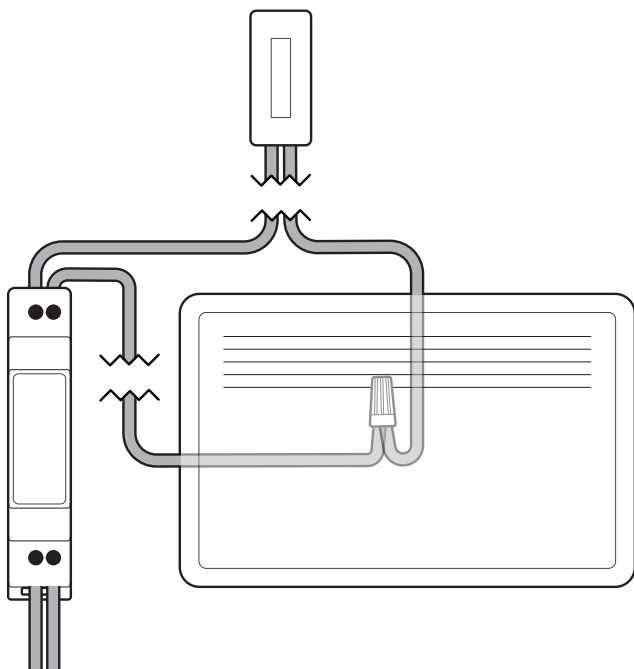

9.

Refer to your doorbell setup guide to complete setup.

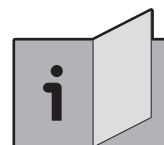

ring.com/contact



ring.com/help

Ring LLC 12515 Cerise Ave, Hawthorne, CA, 90250 USA

Ring LLC / Amazon EU S.à.r.l., 38 Avenue John F. Kennedy, L-1855
Luxembourg / Amazon UK, 1 Principal Place, Worship Street,
London, EC2A 2FA, United Kingdom

アマゾンジャパン合同会社〒153-0064 東京都目黒区下目黒1-8-1

شركة Ring LLC طريق سيبريس مبنى 12515 مدينة هاولثورن، كاليفورنيا،
90250، الولايات المتحدة الأمريكية.

©2025 Ring LLC or its affiliates. Ring and all related
marks are trademarks of Ring LLC or its affiliates.

©2025 Ring LLC又はその関連会社。Ring及びこれらに関するすべての商標
は、Ring LLC又はその関連会社の商標です。

